




UNIÓN PLÁSTICA S.A.S.

Soluciones Confiables en Plástico

Installing the Irrigation Valve

Diagram Reference:

1. Nut
2. Grommet
3. Gate
4. Hole punch with handle (4) and perforating edge (under safety cap, 5).
5. Safety cap

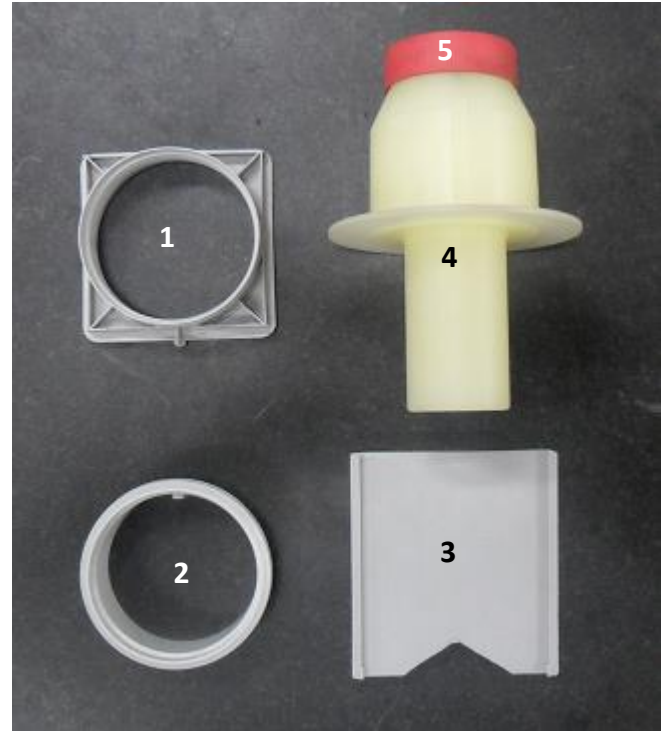


Installation procedure:


Open the valve to remove the gate.



Insert the hole punch into the same side from which the gate was removed, making sure to match up the valve groove with the hole puncher guide groove.

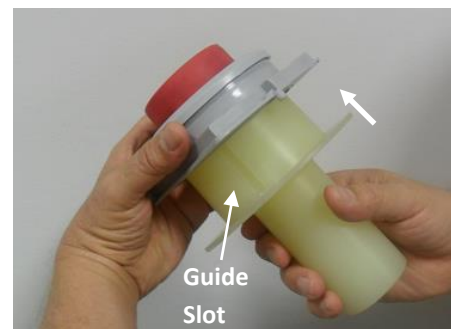

Holding the frame steady, twist the hole punch counter-clockwise, until the nut unscrews from the valve, leaving a half-centimeter gap.

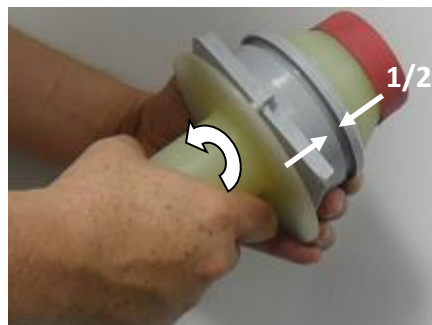

Remove the safety cap from the hole punch. Push the punch firmly into the side of the poly tubing, embedding it up to the half-centimeter gap in the gate valve.



Holding the valve by the frame, twist the hole punch clockwise to firmly tighten the nut.



Remove the hole punch and place the gate into the valve again to close.

Replace the safety cap after use in order to avoid potential injury.



Contact Us

Carrera 39 12 A 151 Acopi-Yumbo

Tel. 57-2-664 4425 Fax 57-2- 664 7336

Postal Code. 760502 Yumbo, Colombia

Valle del Cauca, Colombia

www.unionplastica.com

uniplas@unionplastica.com